


MUSICIANS' HOUSE

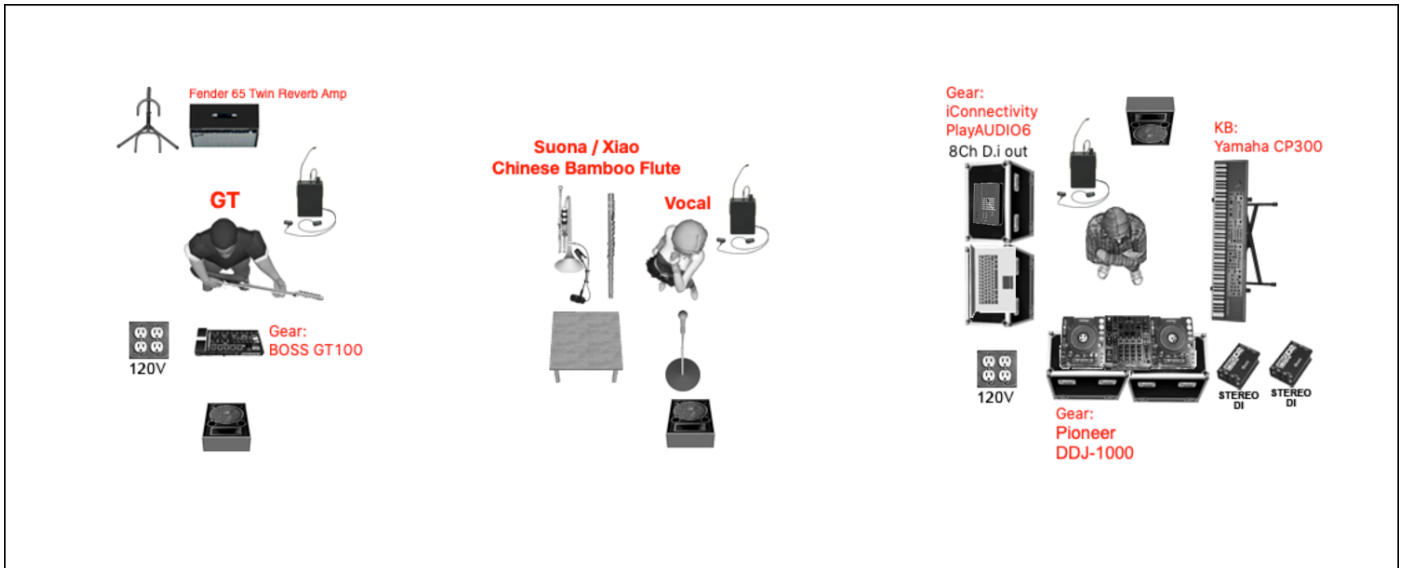

INPUT CHANNEL LIST			
DJ (Pioneer DDJ-1000)			
CH1	DDJ-1000	RCA out	Kick / FX L
CH2	DDJ-1000	RCA out	Kick / FX R
Program (PlayAudio 12)			
CH3	PGM1	6.3 Jack D.I out	Bass L
CH4	PGM2	6.3 Jack D.I out	Bass R
CH5	PGM3	6.3 Jack D.I out	GT L
CH6	PGM4	6.3 Jack D.I out	GT R
CH7	PGM5	6.3 Jack D.I out	Synth L
CH8	PGM6	6.3 Jack D.I out	Synth R
CH9	PGM7	6.3 Jack D.I out	Suona
CH10	PGM8	6.3 Jack D.I out	Click&Cue (Only Sent to IEM)
Keyboard			
CH11	Keyboard		Main L
CH12	Keyboard		Main R
Vocal			
CH13	Vocal Mic		
Suona 、 Chinese Flute 、 Xiao			
CH14	Suona 1		
CH15	Suona 2		
CH16	Chinese Flute 、 Xiao		
Electric Guitar			
CH17	Guitar Amp Mic		

PANDORA

Suona 、 Chinese Flute 、 Xiao 、 Vocal

REQUIREMENTS	—	#	—DETAILS
Suona 1 Mic	DPA4099	— 1	
Suona 2 Mic	DPA4099	— 1	
Chinese Flute 、 Xiao MIC	AKG414	— 1	
Vocal Mic		— 1	
Vocal Mic Stand		— 1	
Instrument Table	DS800	— 1	For place instrument
IEM		— 1	Wireless
Wedge Monitor		— 1	

RABBII POOP

DJ 、 Keyboard 、 Program

REQUIREMENTS	—	#	—DETAILS
DDJ-1000 D.I.		— 1	Stereo
RCA To XLR Cable		— 2	For DDJ-1000 Out To D.I
6.3 Jack out Cable		— 8	For PGM To PA
Keyboard D.I.		— 1	Stereo
DJ Table		— 1	L:80cm W:200 H:85cm
Program Table		— 1	L:80cm W:200 H:85cm
Black Cloth		— 1	For DJ Program Table
IEM		— 1	Wireless
Wedge Monitor		— 1	
Power		— 4	110V

CS CHIOU

Electric Guitar

REQUIREMENTS	—	#	—DETAILS
Fender 65 Twin Reverb Amp		— 1	
Guitar Stand		— 1	
Guitar Cable		— 1	Over 3M
IEM		— 1	Wireless
Wedge Monitor		— 1	
Power		— 1	110V